


Figure 4

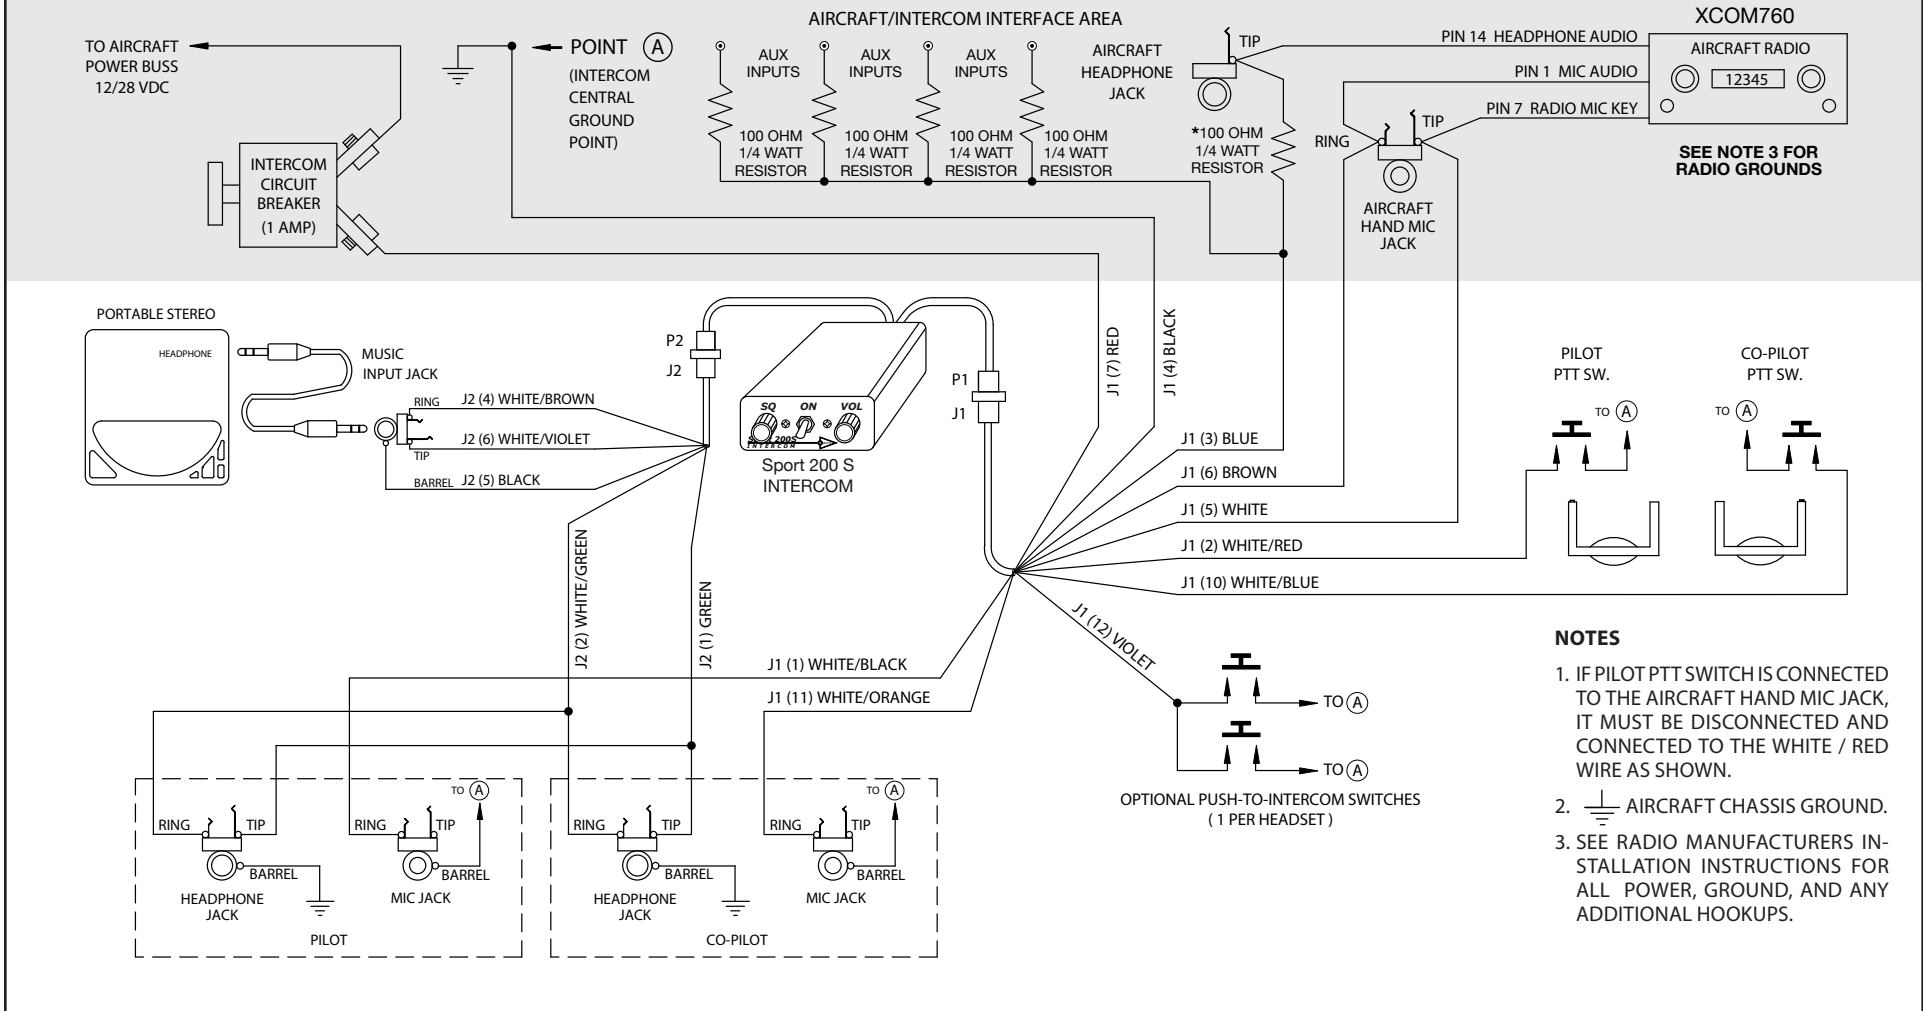

NOTES

1. IF PILOT PTT SWITCH IS CONNECTED TO THE AIRCRAFT HAND MIC JACK, IT MUST BE DISCONNECTED AND CONNECTED TO THE WHITE / RED WIRE AS SHOWN.
2. AIRCRAFT CHASSIS GROUND.
3. SEE RADIO MANUFACTURERS INSTALLATION INSTRUCTIONS FOR ALL POWER, GROUND, AND ANY ADDITIONAL HOOKUPS.

Sport 200S – XCOM VHF760 Radio Installation Wiring Diagram

*** ICS Load Modification**
 For more information about this resistor mod see the ICS Load Modification instructions.
 File Name: **ICS-Load_1440_Mod.pdf**

