

# Sigtronics Special 4 Conductor Jack Wiring Instructions


Model: SE-?? RPTT HEADSETS

To install Sigtronics headsets with radio Push-To-Transmit buttons on them (models SE-??RPTT) requires a special four conductor jack. The jack terminals are marked 1 through 4. The markings are stamped right on the terminals themselves where the wires are to be soldered. Use the following table to wire these jacks into a Sigtronics UltraSound or EAI intercom system.


For Officer Connect to UltraSound / EAI Wire		Jack Terminal	For Driver & Pump Panel Connect to UltraSound / EAI Wire	
Wire Color	Function	P/N 100470	Wire Color	Function
White / Black	Mic	<b>1</b>	White / Orange	Mic
Blue	Headphone	<b>2</b>	Blue	Headphone
White / Red	Radio PTT	<b>3</b>	White / Blue	Radio PTT
Black	Common	<b>4</b>	Black	Common

**Four Conductor Jack**  
P/N 100470

**Terminal Orientation**  
Back of four conductor jack

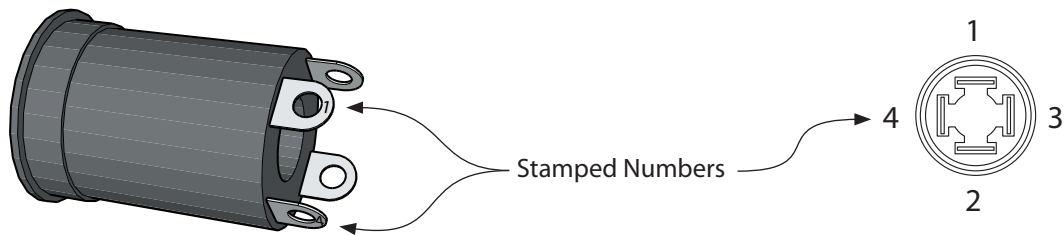

**RPTT Headset Plug**

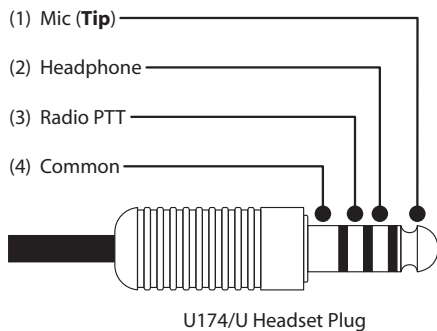

*Clear Communication*   
**EVERY TIME**

**Sigtronics Corporation**

178 East Arrow Highway

San Dimas, California

**Phone:** (909) 305-9399

**E-mail:** info@sigtronics.com

**Web Site:** www.sigtronics.com