

The headset parts may be cleaned with mild soap and water using a soft cloth. Then dry immediately. **Caution: Do Not immerse** any part of the headset in water or any other liquid. Be especially careful not to allow the microphone to become wet! Exposure to moisture may cause internal corrosion and failure and will void your manufacturers warranty.

Cleaning will help the headset maintain its "like new" condition for many years.

WINDSCREEN

The microphone windscreen will reduce annoying wind noise and breath pops picked up by headset microphones. It also protects the microphone element from dirt and moisture. The windscreen should be washed regularly to maintain hygiene and avoid clogging. Wash in warm water and mild soap. Rinse thoroughly and make sure it is completely dry before putting it back on.

To remove the windscreen, carefully grasp the windscreen lightly along its entire length and remove from the microphone element being careful not to twist the element itself.

Put the windscreen on the microphone by gently pulling from the open end. Do not pull it so tightly that it stretches against the end of the microphone.

WARRANTY

Your headset is covered by a limited five-year parts and labor warranty. Please see the enclosed warranty card for details.

You may refer to the parts list on the reverse side, if you choose to replace parts yourself. The parts list describes parts for this particular headset only. Parts lists for other models are available on our Web Site or can be obtained by contacting Sigtronics Corporation.



Sigtronics Corporation
178 East Arrow Highway
San Dimas, CA 91773
Phone: 909 305-9399
E-mail: info@sigtronics.com
Web Site: www.sigtronics.com

Model S-68H Headset Instructions

The S-68H series headsets are adjusted at the factory for immediate use with all standard general aviation radio systems utilizing the U174/U jack. Headsets are equipped with a coiled cable and a single U174/U plug configuration.

The headband is adjustable through a full range of motion, or the locking nuts may be tightened to allow you to custom fit the headset. Place the headset over your head, adjust the slides up until minimum pressure is felt on the top of your head. The headset is now properly adjusted. For maximum noise attenuation, the clamping pressure has been set at the factory. Releasing the clamping pressure by bending the headband is not advised, because loss of attenuation will result. **Note:** If especially small (children) or large headbands are needed, they may be ordered from Sigtronics.


The microphone boom is fully adjustable and will rotate 180 degrees for use on the left or right side of the head. **Make sure you are speaking into the side of the mic labeled "Talk" or substantial loss of gain will occur. Microphone placement should be at the corner of the mouth, approximately 1/4" from the lips.**

When you first connect the headset, turn the volume control on the headset up to the full clockwise position, then adjust the listening volume with the audio control of either your radio or intercom as appropriate. Passengers should also turn their individual headset volumes up fully. Doing this allows for a full range of adjustment for each passenger, since those with the most acute hearing can turn their headset volume down, if necessary.

continued on back...



...when it counts!

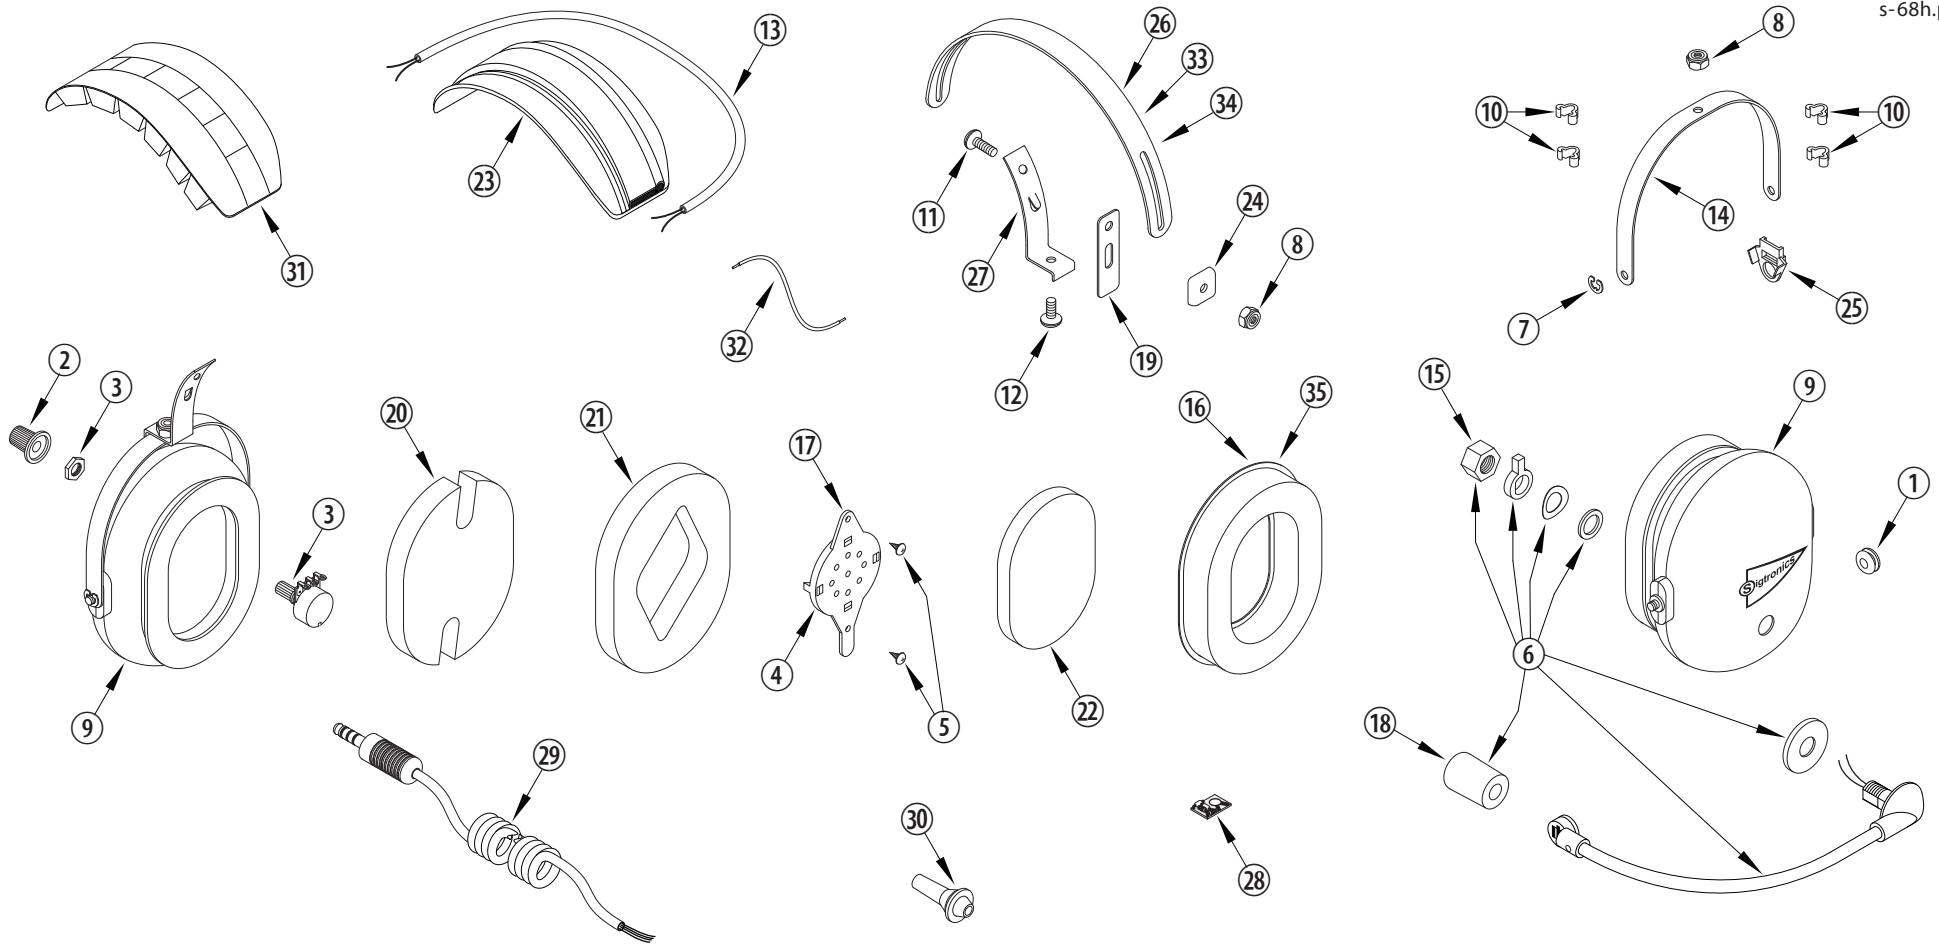

SIGTRONICS S-68H HEADSET PARTS IDENTIFICATION BREAKDOWN

ITEM	P/N	DESCRIPTION	ITEM	P/N	DESCRIPTION	ITEM	P/N	DESCRIPTION
1	100049	GROMMET, 5/16 INCH, RUBBER	13	100366	WIRE, 2 CONDUCTOR, #24, BLACK, 28 INCHES	25	100393	CLIP, ANTI-ROTATION, YOKE, PLASTIC
2	100360	KNOB, BLACK, VOLUME	14	100515	YOKE, EAR CUP MOUNT, METAL, GOLD	26	100514	HEADBAND, METAL, GOLD, STANDARD
3	100365	POTENTIOMETER, 2K	15	100597	NUT, HEX, 3/8-24, FLEX BOOM ADAPTER	27	100516	BRACKET, YOKE SUPPORT WITH TANG, GOLD
4	100079	RECEIVER, 300 OHM, MONO	16	100402	EAR SEAL, GEL FILLED	28	800199	PREAMP, MIC, 8H SERIES
5	100108	SCREW, 4-40 X 1/4, THREAD FORMING	17	100370	RECEIVER MOUNT, HEADSET	29	800046	CABLE, HEADSET, HELICOPTER, COILED
6	800193	MICROPHONE & FLEX BOOM ASSEMBLY	18	900111	WINDSCREEN, MIC, 8 SERIES	30	100569	STRAIN RELIEF, CABLE
7	100520	E-RING, EAR CUP TO YOKE RETAINER, GOLD	19	100373	SLIDE, YOKE BRACKET, LONG, NYLON	31	100610	CUSHION, HEADBAND, FOAM FILLED
8	100524	NUT, HEX, 8-32, LOCKING, GOLD	20	100374	FOAM, SOUND ATTENUATING. NOTCHED, 1/2 INCH	32	100221	WIRE, JUMPER, #22, 4 INCHES
9	100614	EAR CUP, PRINTED AND DRILLED, MIC & NON MIC SIDE	21	100376	FOAM, SOUND ATTENUATING. RECEIVER HOLE, 1/2 INCH	33	100674	OPTIONAL - HEADBAND, METAL, GOLD, LARGE
10	100362	CLIP, CROSS-OVER, WIRE, PLASTIC	22	100379	FOAM, SOUND ATTENUATING, RECEIVER COVER, 1/4 INCH	34	100673	OPTIONAL - HEADBAND, METAL, GOLD, YOUTH
11	100522	SCREW, 8-32 X 1/2, PHILLIPS HEAD, GOLD	23	100606	HEAD BAND EXTRUSION, 6.25 IN., 5-68	35	100369	OPTIONAL - EAR SEAL, FOAM FILLED
12	100521	SCREW, 8-32 X 3/8, PHILLIPS HEAD, GOLD	24	100258	CLIP, HEADBAND GUIDE, PLASTIC			